MANUAL DE INSTRUCCIONES

NEVERA

NV-5141

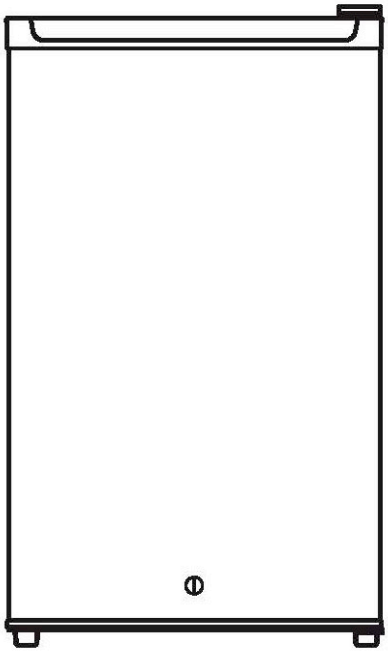

ESTIMADO CLIENTE

Con el fin de que obtenga el mayor desempeño de su producto, por favor lea este manual de instrucciones cuidadosamente antes de comenzar a utilizarlo, y guárdelo para su futura referencia.
Si necesita soporte adicional, no dude en escribir a: ***info@premiermundo.com***

PRECAUCIÓN

RIESGO DE CHOQUE ELÉCTRICO , NO ABRA

Precaución: Para reducir el riesgo de choque eléctrico, no retire la cubierta, no hay partes manipulables por el usuario al interior de la unidad. Refiera todo mantenimiento o intervención técnica a personal técnico calificado.

Este símbolo indica la existencia de voltaje peligroso al interior de esta unidad, que constituye un riesgo de choque eléctrico.

Este símbolo indica que hay importantes instrucciones de operación y mantenimiento en la literatura que acompaña a esta unidad.

LÍNEAS DE SERVICIO AL CLIENTE PREMIER

Venezuela:	0800 – ELECTRIC (353-2874)
Panamá:	300-5185
Sitio Web:	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTA:
Nos reservemos el derecho de modificar las especificaciones, características y/u operación de esta unidad sin previo aviso, con el fin de continuar las mejoras y desarrollo del mismo.

PARTES Y CARACTERÍSTICAS

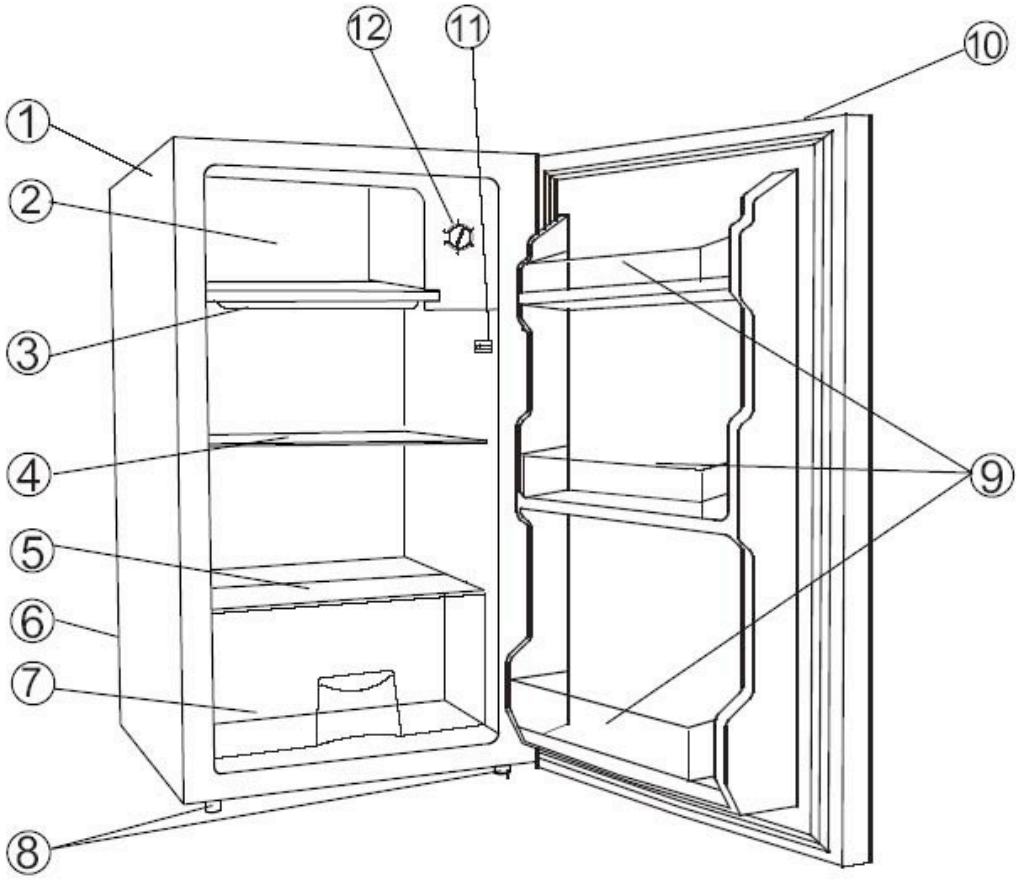

1.Exterior
2.Puerta del congelador
3.Bandeja de desagüe
4.Estantes
5.Tapa
6.Compresor
7.Compartimiento de verduras
8.Patas
9.Estantes para botellas
10.Puerta
11.Interruptor
12.Termostato

2. UBICACIÓN CORRECTA PARA LA INSTALACIÓN

BUENA VENTILACIÓN

Este refrigerador necesita tener una buena ventilación alrededor para que el calor se disipe fácilmente, que el refrigerador rinda adecuadamente y que no se consuma excesiva energía eléctrica. Por lo tanto, asegúrese de que haya suficiente espacio libre alrededor del refrigerador. En la parte posterior deje al menos 100m de distancia a la pared, 100mm a los costados y al menos 200mm en la parte superior. Debe haber espacio suficiente para abrir la puerta a 160º.

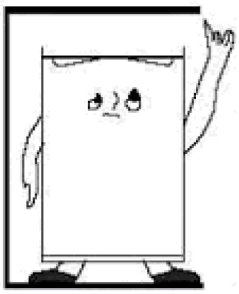

FUENTE DE ENERGÍA

Este refrigerador debe ser enchufado solamente a un tomacorriente monofásico de corriente alterna con un voltaje de 115V ~ 60Hz Si la fluctuación de voltaje de su área es mayor al rango aceptado por este refrigerador, asegúrese de emplear un regulador de voltaje AC automático. Este refrigerador debe ser enchufado a un tomacorriente especial. El tomacorriente debe contar con una conexión a tierra.

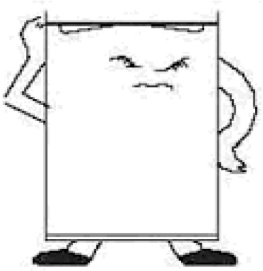

CABLE DE ENERGÍA

El cable de energía debe estar estirado o doblado dentro de la bobina durante el funcionamiento. Así también queda prohibido que el cable de energía quede cerca del compresor ubicado en la parte posterior del refrigerador, ya que la temperatura de su superficie del mismo asciende considerablemente y podría dañar el aislante del cable o provocar un corto circuito.

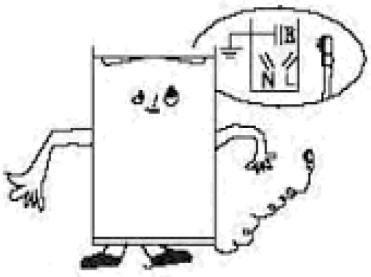

HUMEDAD

Evite instalar el refrigerador en ambientes demasiado húmedos para reducir la posibilidad de que las partes metálicas del mismo se corroan. Queda prohibido salpicar agua al refrigerador, caso contrario podría anular la aislamiento o provocar un corto circuito.

CALOR

Mantenga el refrigerador alejado de fuentes de calor o la luz directa del sol.

ESTABILIDAD

El refrigerador debe ser colocado sobre un piso estable y plano. No lo asiente sobre superficies débiles como ser espuma plástica, etc. Si el refrigerador no está bien nivelado, ajuste las patas de nivel. No coloque el refrigerador cerca de objetos que provoquen vibraciones.

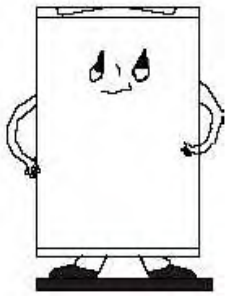

SUSTANCIAS PELIGROSAS

No coloque el refrigerador cerca de sustancias volátiles o inflamables como ser gas, gasolina, alcohol, aceites, etc. Así mismo, no almacene dichas sustancias dentro del refrigerador.

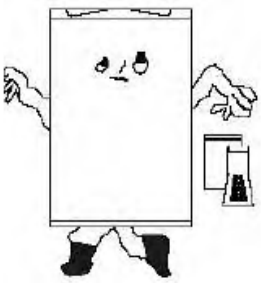

TRASLADO

Cuando traslade el refrigerador no debe inclinarlo en posición horizontal o a más de 45º o cabeza abajo.

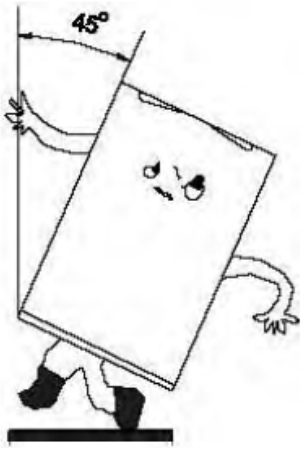

PRECAUCIONES

• Debido a la entrada de aire por la puerta y el agua que contienen los alimentos se forma una capa de hielo en el interior de la nevera. Cuando esta capa es muy gruesa reduce el rendimiento del aparato. Se debe descongelar el frigorífico cuando la capa alcance un grosor de 2mm

• La descongelación es un proceso manual. Antes de descongelar el aparato, saque todos los alimentos, la bandeja de cubitos de hielo y el estante. Coloque el termostato en posición “0” (el compresor dejará de funcionar) y deje la puerta abierta hasta que el hielo se derrita y se acumule en la bandeja de desagüe. Saque la bandeja y deseche el agua con cuidado. Si quiere acelerar el proceso de descongelación coloque un tazón de agua caliente (aprox. 50ºC) dentro del compartimiento congelador. Después de descongelar vuelva a configurar el termostato.

• No se aconseja calentar el congelador directamente con agua caliente o un secador para acelerar la descongelación ya que podría estropear el interior.

• No intente quitar el hielo o alimentos pegados con objetos afilados ya que podría estropear el interior del aparato o la superficie del evaporador.

• Si el cable de alimentación se estropea sólo lo debe sustituir o reparar un técnico cualificado y autorizado.

INSTALACION DE LA PUERTA

Este frigorífico se ha construido para que abra por la izquierda. Si quiere que la puerta abra por el otro lado siga las siguientes instrucciones:

1）Quite la cubierta de la bisagra superior (6).
2）Quite los dos tornillos (1) que sujetan la bisagra superior (5) (lado derecho). Quite la bisagra superior (5).
3）Levante la puerta y colóquela sobre una superficie que no la raye.
4）Quite los dos tornillos (8) que sujetan la bisagra inferior (2) y quite la bisagra (2).
5）Quite la pata izquierda frontal (4) y colóquela en el lado derecho.
6）Quite la placa (7) y colóquela en el lado derecho.
7）Quite el perno (9) y de la vuelta a la bisagra inferior (2). Vuelva a colocar la bisagra en lado izquierdo y sujete con los dos tornillos (8).
8）Coloque el tornillo (9).
9）Coloque la puerta

10）Sujete la puerta y coloque la bisagra superior (5) con los dos tornillos (1). No apriete los tornillos hasta que la puerta esté bien colocada.

11）Coloque la cubierta de la bisagra superior (6).

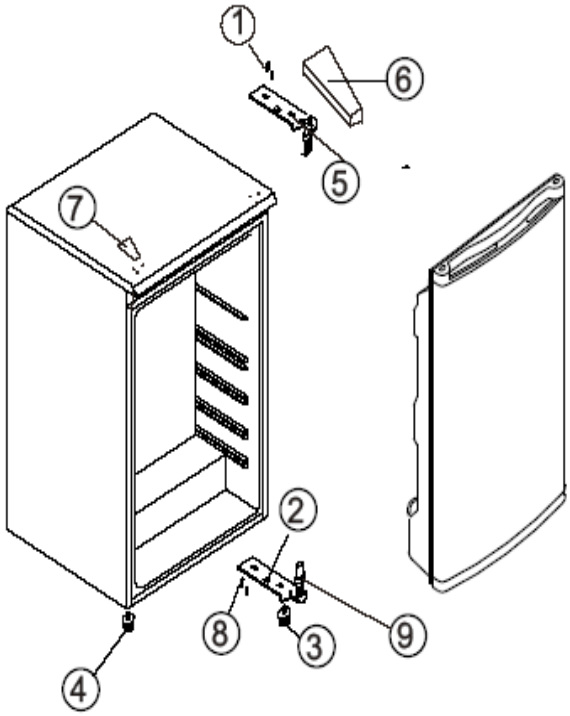

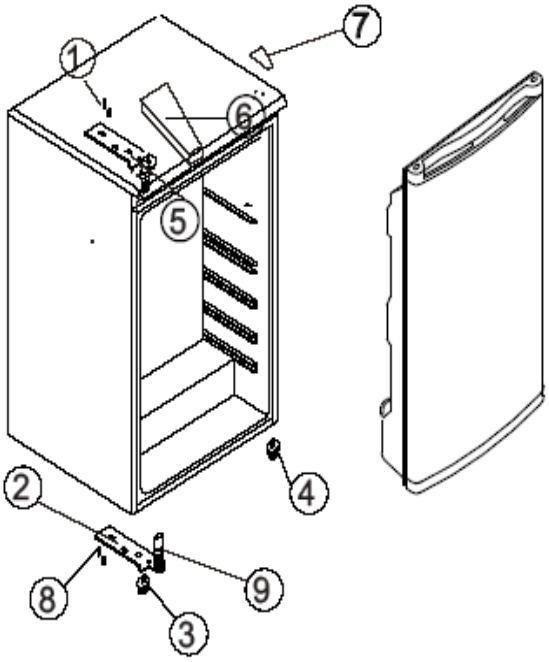

FIGURA 1 **FIGURA 2**

FIGURA 1 – LOS COMPONENTES ANTES DE CAMBIAR LA INSTALACIÓN
FIGURA 2 – LOS COMPONENTES DESPUÉS DE CAMBIAR LA INSTALACIÓN

PROBLEMAS Y SOLUCIONES

1. SI EL REFRIGERADOR NO FUNCIONA
- Revise que no haya habido un corte de energía.
- Revise que el cable de energía esté enchufado al tomacorriente.
- Revise que no haya saltado un fusible.

2. SI EL REFRIGERADOR ENFRÍA DEMASIADO
- Es posible que el termostato esté en una posición muy alta.
- Si ha colocado alimentos que contengan mucho líquido justamente debajo de las salidas de aire, estos se congelarán rápidamente, lo cual no representa falla alguna.

3. SI EL REFRIGERADOR NO ENFRÍA LO SUFICIENTE
- Los alimentos están demasiado amontonados y están bloqueando las salidas de aire.
- Es posible que haya colocado algo muy caliente o demasiados alimentos dentro del refrigerador.
- Es posible que no haya cerrado bien la puerta.
- Es posible que el aislante de la puerta esté dañado.
- El refrigerador no tiene buena ventilación.
- No hay suficiente espacio libre entre el refrigerador y las superficies circundantes.
- El termostato no está bien regulado.

4. EL AGUA DEL DESCONGELADO CAE DENTRO DEL REFRIGERADOR Y AL PISO
- Revise que el tubo de drenaje y la manguera no estén obstruidas.
- Asegúrese que el recipiente de deshielo esté en la posición correcta.

5. SE FORMA CONDENSACIÓN EN LAS PAREDES EXTERIORES DEL REFRIGERADOR
- Es posible que se forme condensación durante las estaciones húmedas, de la misma manera que se forma condensación en un vaso con agua fría, por lo tanto, esto no representa falla alguna.

6. SE ESCUCHA UN SONIDO PARECIDO A AGUA QUE FLUYE
- Ese sonido es causado por el refrigerante que está circulando, por lo que este sonido no representa falla alguna.

7. LAS PAREDES LATERALES SE CALIENTAN
- Las paredes laterales del refrigerador se calientan cuando la puerta es abierta con mucha frecuencia, cuando enciende el refrigerador o durante el verano cuando la temperatura exterior es muy alta. En ese caso no toque las paredes del refrigerador. Esto se debe a la disipación del calor interior y no representa falla alguna.

ESPECIFICACIONES TÉCNICAS

- Las especificaciones técnicas se encuentran en la etiqueta situada en la parte posterior del refrigerador.
- Las especificaciones están sujetas a cambios sin previo aviso.

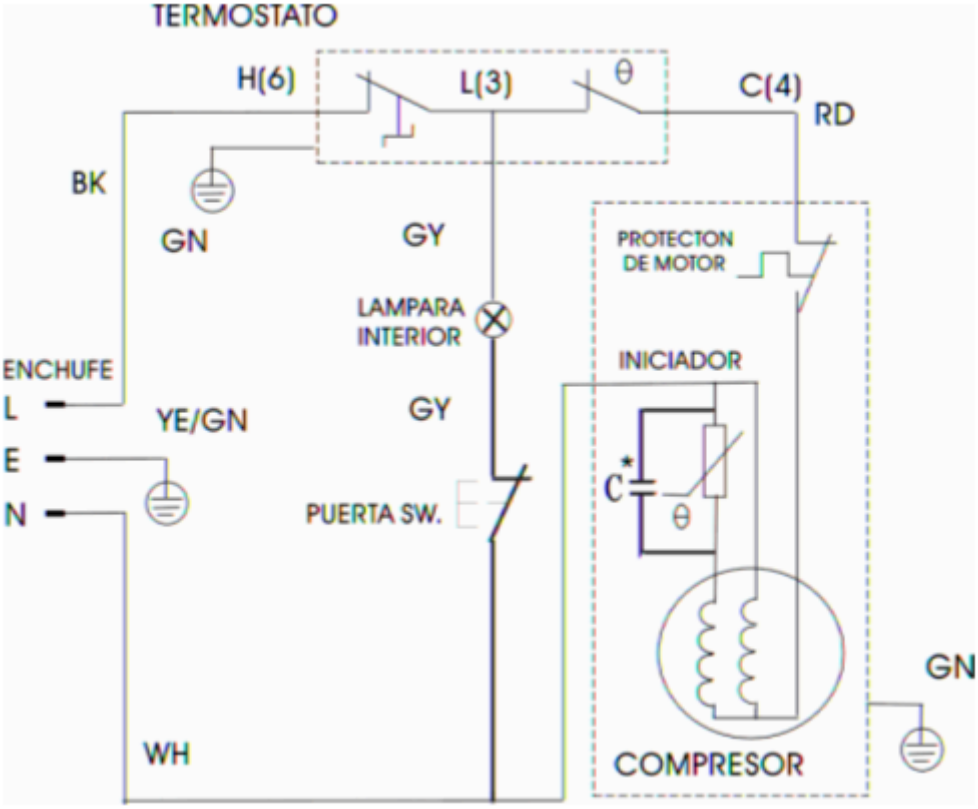

VOLTAJE : AC115V/ 60HZ
ENERGIA DE ENTRADA : 110W
CAPACIDAD GRUESA: 115L
CAPCAIDAD NETA : 112L
REFRIGERANTE: R600A
CLASE DE ENERGIA: A

PREMIER®

INSTRUCTION MANUAL
REFRIGERATOR

NV-5141

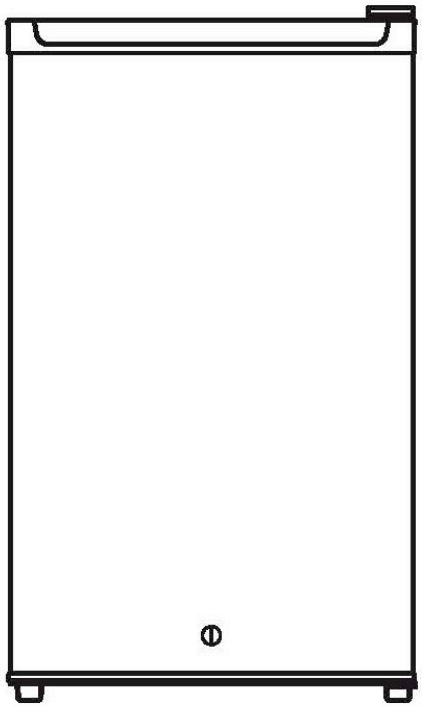

DEAR CUSTOMER

In order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

If you need extra support, please write to ***info@premiermundo.com***

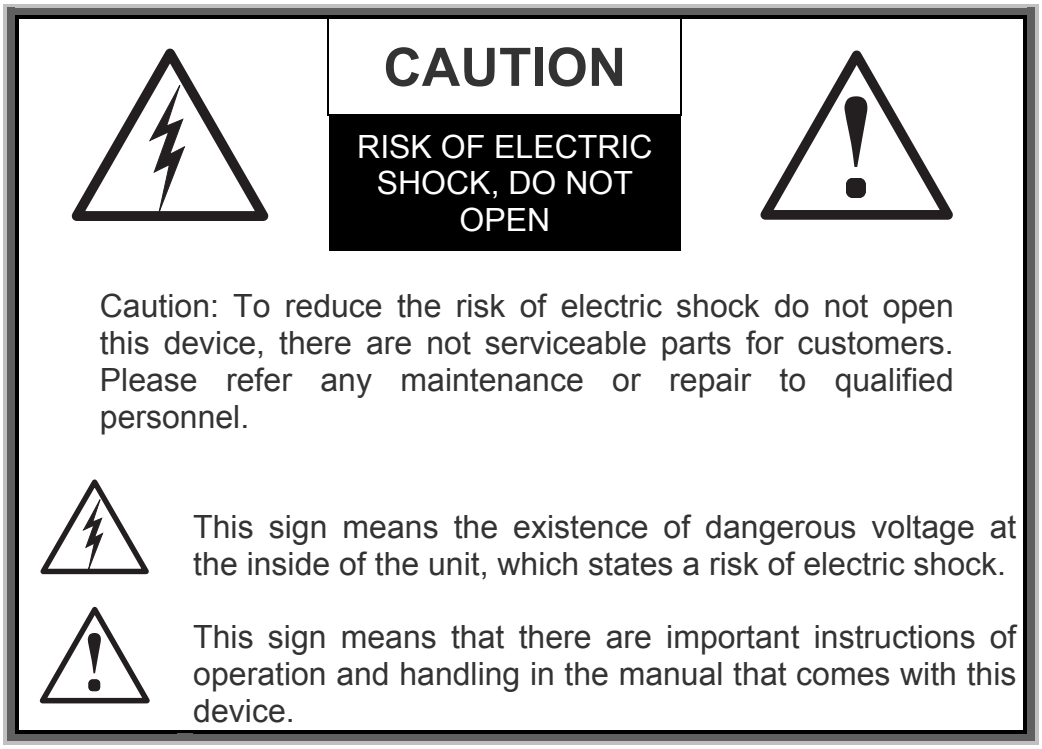
CAUTION
RISK OF ELECTRIC SHOCK, DO NOT OPEN
Caution: To reduce the risk of electric shock do not open this device, there are not serviceable parts for customers. Please refer any maintenance or repair to qualified personnel.
This sign means the existence of dangerous voltage at the inside of the unit, which states a risk of electric shock.
This sign means that there are important instructions of operation and handling in the manual that comes with this device.

PREMIER CUSTOMER SERVICE

Venezuela:	0800 – ELECTRIC (353-2874)
Panama:	300-5185
Website	www.premiermundo.com
E-mail:	servicioalcliente@premiermundo.com

NOTE:
The unit may be submitted to changes in specifications, characteristics and / or operation without prior notice to the user, in order to continue improving and developing its technology.

1. Name of parts

PARTS AND FEATURES

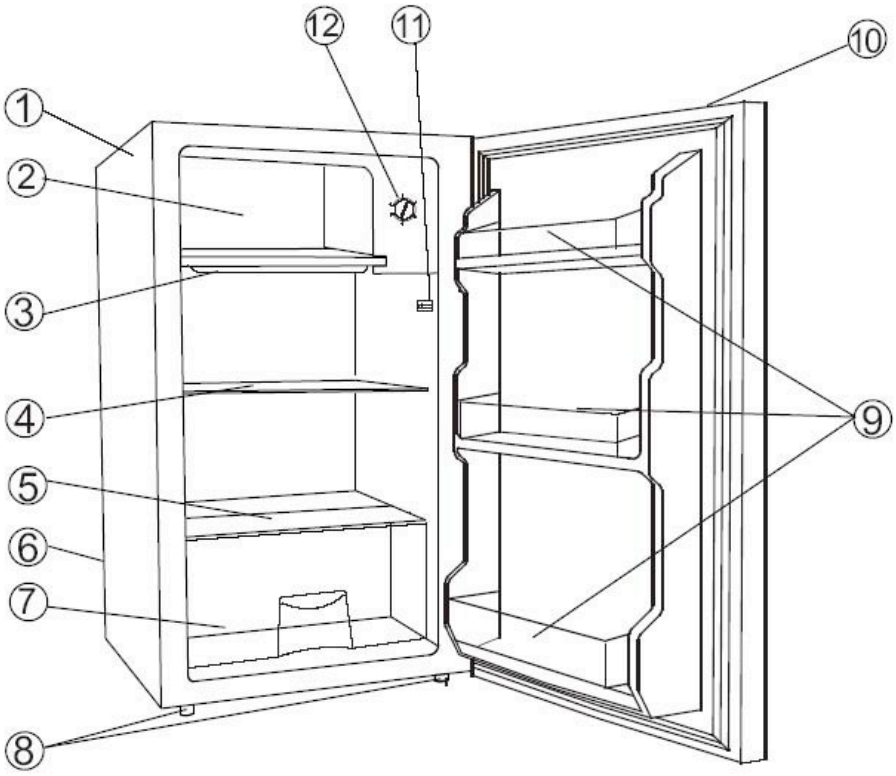

1.Cabinet	7.Crisper Box
2.Freezer Room Cover	8.Leveling Legs
3.Freezer Tray	9.Door Balconies
4.Wire Shelf	10.Door Gasket
5.Glass Cover	11.Door Switch
6.Compressor(Back)	12.Thermostat

2.Correctly positioning

Well Ventilating

There is need of good ventilation around the refrigerator for easy dissipation of heat, high efficiency of refrigeration and low power consumption. For this purpose, sufficient clear space should be need around the refrigerator. Its back is at least 100mm away from the wall, its sides at least have a space of 100mm separately and the height from over its top is not less than 200mm. A clear space should be left to open its doors to 160 °

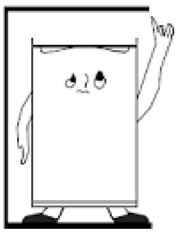

Power Supply

The refrigerator is only applied with power supply of single phase alternating current of 115V ~ 60Hz If fluctuationof voltage in the district user is of so large that the voltage exceeds the above scope, for safety sake, be sure to apply a.c. automatic voltage regulator to the refrigerator. The refrigerator must employ a special power socket instead of common one with other electric appliances.Its plug must match the socket with ground wire.

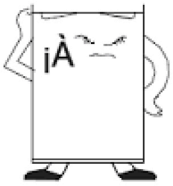

Power Line Cord

The cord should be neither lengthened nor folded into coil during operation. Moreover, it is forbidden that cord is kept close onto the compressor at the back of the refrigerator, the surface temperature of which is quite high when operating. Touching with it would deactivate the insulation or cause leakage for electricity.

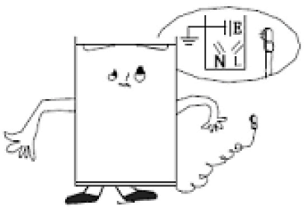

Protection from Moisture

Avoiding placing the refrigerator in a place where heavy moisture is present so as to minimize possibility of rusty for its metal parts. Still more, the refrigerator is forbidden to be directly sprayed by water, otherwise, poor insulation and current leakage would occur.

2.Correctly Positioning

Protection from Heat

The refrigerator should be far away from any heat source or direct sunshine.

Fixing Stable

Floor on which refrigerator will be placed must be flat and solid. It should not be laid on any soft material such as foam plastic, etc. If the refrigerator is not on the same level, adjust the screws suitably. The refrigerator should not be placed near anything which may echo.

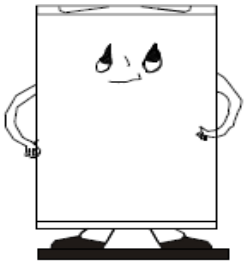

Keep Away from Danger

It is inadvisable that the refrigerator is placed near any volatilizable or combustible such as gas, petrol, alcohol, lacquer and banana oil, etc. The above-mentioned objects can not be stored in the refrigerator.

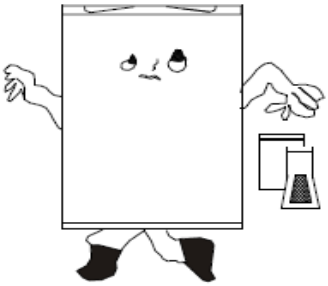

Moving

When fixed or moved, the refrigerator can not be set horizontally or declined to more than 45° or upside-down.

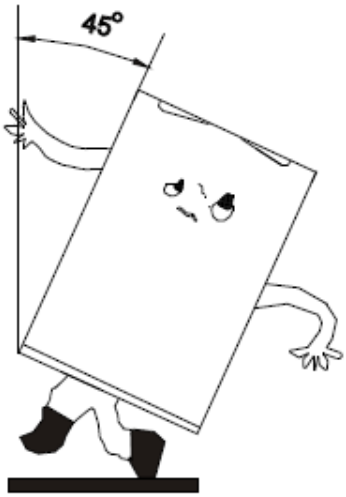

3.Cautions

★ Water contained in food or getting into air inside the refrigerator by opening doors may form a layer of frost inside, It will weaken the refrigerator when the frost is thick, while it is more than 2mm thick, you should defrost.

★ Defrosting in freezer chamber is operated manually. Before defrosting, take the food, the ice tray and the shelf out into the cold storing chamber temporarily then set the knob of the temperature regulator to position"0"(where the compressor will stop working) and leave the door open until ice and frost dissolve thoroughly deposited at the bottom of the freezer chamber, wipe off the water with soft cloth.,In the case of speeding up the defrosting, you may put a bowl of warm water (about 50 C)into the freezer chamber, and

★ It's inadvisable to heat the freezer chamber directly with hot water or hair dryer while defrosting to prevent deformation of the inner case.

★ It's also inadvisable to scrape of ice and frost or separate food from the containers which have been congealed together with the food with sharp tool or wooden bars, so as not to damage the inner casing or the surface of the evaporator.

★ If the supply cord of this appliance is damaged, it must only be replaced by a repair shop appointed by the manufacturer, because special purpose tools are required.

4.Changing the reversible door

1) Remove the two screws (1) joining the top panel (5) to the cabinet.
2) Take away the top panel (5) by pulling it towards the front.
3) Remove the screws (6) which fix the steel plate (10).
4) Take away the steel plate (10) and lift the door. Put the door on a soft surface to keep it from getting scratched.
5) Remove the two screws (8) that hold the lower hinge (2) and make sure to remove the lower hinge (2).
6) Take off the front left leg (4) and transfer it to the right side.
7) Before placing this lower hinge (2), remove the bolt-pin (9) and reverse the direction of the lower hinge (2). Then install the lower hinge (2) onto the left side of the lower frame with two screws (8).
8) Insert the bolt-pin (9) into the lower hinge (2).
9) Take off the upper hinge (7) on the right hand side of the steel plate (10) and install the upper hinge (7) on the left side of the steel plate (10).
10) Set the door in place making sure the door seats into the lower hinge(2).
11) While holding the door closed, put the upper hinge (7) into the door hinge hole and secure the steel plate(10) in the top frame with the screws(6). Please remember not to tighten the screws (6) until the top of the door is levelled with the counter top.
12) Insert the front edge of the top panel (5) into the steel plate (10) and fix the top panel (5) onto the top of the cabinet with two screws (1).

4. Changing the reversible door

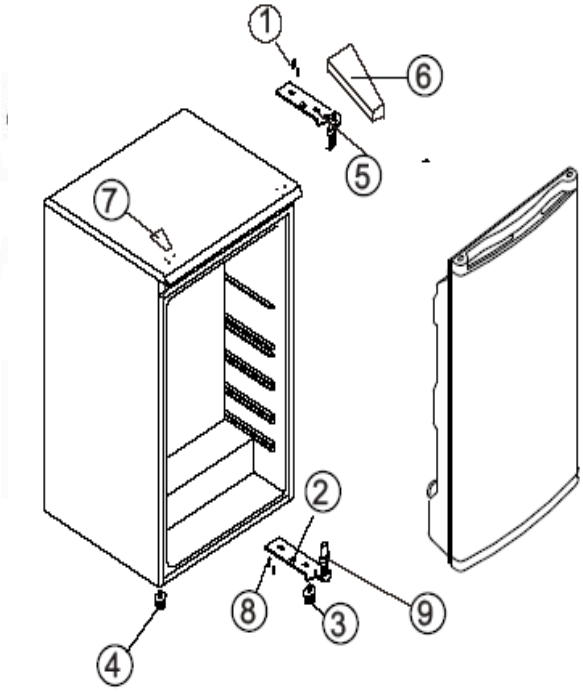

FIGURE 1

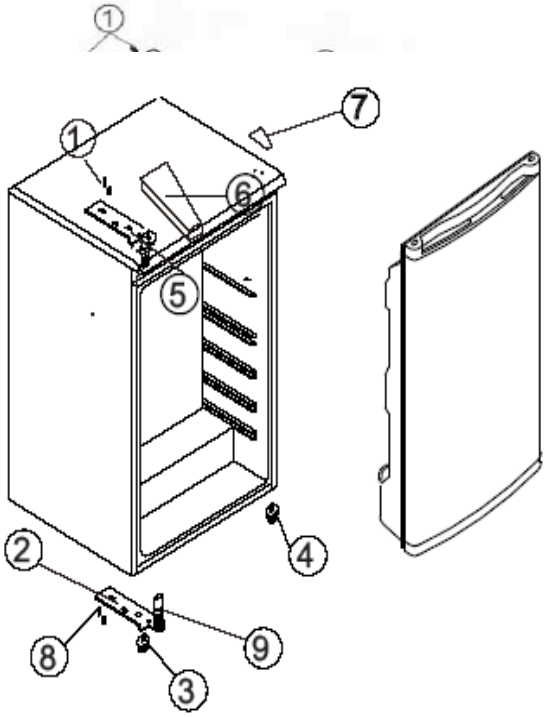

FIGURE 2

FIGURE 1 - REPRESENTS POSITION OF COMPONENTS PRIOR TO DOOR REVERSAL.
FIGURE 2 - REPRESENTS POSITION OF COMPONENTS AFTER DOOR REVERSAL.

5.Maintenance

★ The refrigerator should be cleaned and maintained once a month.

★ When performing maintenance, make absolutely sure that the power plug is first disconnected from the power outlet.

★ Wipe the inner and outer surface of the refrigerator and its accessories with wet cloth. If they are too dirty, scrub them with neutral detergent, and then clean them with water and dry them with clean cloth. After this, a small quantify of glass wax is recommended to polish the refrigerator surface with a flannelette.

★ For cleaning, don't use hot water, diluent, petrol, alcohol, kerosene, washing powder, cleanser, aikailinous detergent, acid, Chemical cloth, etc. So as not to damage the lacquer coat and plastics. It is forbidden than the refrigerator is directly sprayed with water. Otherwise, it would cause rusty or weaken the insulation.

★ Be careful to upkeep the sealing rubber bars of the doors. They should always be cleaned.

★ If the plastic parts in refrigerator remain contaminated for a long time by oil (animal or vegetable), they will be easy aged and possibly cracked. The drain pan gets dirty very easily if it is not cleaned regularly, bad odours will be produced, get into the habit of cleaning this pan regularly.

6. Troubleshooting

1. When the refrigerator does not work
   Check if there is a power failure.
   Check if the power plug is plugged into the power outlet.
   Check that the fuse has not blown.

2. When the refrigerator is cooling excessively
   The temperature control dial may be set too high.
   If you place foodstuffs containing a lot of moisture directly under the cool air outlets, they will freeze easily. This does not indicate a malfunction.
   The food may be packed too tightly together which will block the flow of cool air.

3. When the refrigerator is not cooling sufficiently
   You may have put something hot or a lot of foodstuffs into the refrigerator .
   The door may not have been closed properly.
   The door gaskets may be damaged.
   The refrigerator may not be ventilated.
   There may be insufficient clearance between the refrigerator and the surfaces Immediately both sides and above.
   The temperature control dial may not be set properly.

4. When the defrosting water overflows inside the refrigerator and onto the floor.
   Check that the drain pipe and the drain hose are not clogged.
   Check that the drain pan is housed properly.

5. When condensation form on the outside of the refrigerator.
   Condensation may form on the outside when the humidity is high such as during a wet season. This is the same result as the condensation formed when chilled water is poured into a glass. It does not, therefore, indicate a failure, wipe dry with a dry cloth.

6. When you hear a sound like water flowing .

7. When the cabinet's side panel heats up
   The side panel of the cabinet will heat up when the door is opened or closed frequently, when starting the unit and when the unit operates in summer with high ambient outside temperature, In such case, do not touch the panel, it results from the dissipation of the heat from inside the cabinet, and it does not mean that something is wrong with the refrigerator.

Schematic Diagram



VOLTAGE : AC115V/60Hz
INPUT POWER : 110W
GROSS CAPACITY: 115L
NET CAPACITY : 112L
REFRIGERANT : R600A
ENERGY CLASS: A